

Power Tip Compatibility Chart

Notebook Power Tips

(included in box - for laptop computers only)

Manufacturer	Tip Color	Kensington Tip
DELL®	GREEN	H, J
HP®/COMPAQ®	GREEN	E, H, I
ACER®	GREEN or BLUE	C, D, E, H
GATEWAY®	GREEN	D, H
FUJITSU-SIEMIENS®	GREEN	H
ASUS®	GREEN	E, H
IBM®/LENOVO™*	GREEN or BLUE	C, H, L
TOSHIBA®*	GREEN or BLUE	B, H
SONY®	BLACK	G

Note: Tip color should match the LED color on the power cord or adapter. If the LED color does not match the tip color, please refer to the Quick Start Guide for instructions.

*For these laptop manufacturers, refer to the Quick Start Guide to determine the proper tip color.

USB Power Tip Packs

(all Packs include a USB retractable cable and are sold separately)

Cell Phone/PDA	Power Tip Pack SKU#
MOTOROLA®	K24511
NOKIA®	K24512
SAMSUNG®	K24513
LG®	K24514
SONY-ERICSSON®	K24515
RIM BLACKBERRY®	K24516
PALM®	K24517
HP IPAQ®	K24518

Entertainment	Power Tip Pack SKU#
GAMEBOY/PSP®	K22028
CREATIVE ZEN®	K22029
APPLE IPOD®	K22030