


Set Up Instructions

1. Select your netbook manufacturer and compatible tip(s) from the chart below
2. Check that the color-coded selector switch is in the GREEN position as shown
3. Check that the selected tip(s) fits your netbook
4. Need help? Call us **1-866-908-HELP** (4357) in the U.S. or Canada or visit www.kensington.com

Netbook Compatibility:		
Netbook Brand	Color Code	Compatible Tip(s) Included
Acer® Aspire One	Green	D, H
Asus® EEE PC Series	Green	M
Dell® Inspiron Mini Series	Green	D, H
HP® Mini and Mini-Note Series	Green	I
Lenovo® IdeaPad S Series	Green	D, H
LG® X Series	Green	D, H
MSI® Wind	Green	D, H
Samsung® NC Series	Green	O
Toshiba® NB Series	Green	H



If a tip fits in your notebook but does not charge when plugged in please try the other compatible tips.

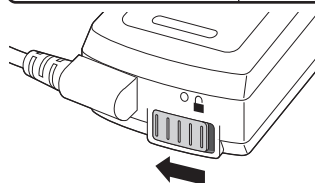

Color-coded selector switch in GREEN position

900-3128-01



BLACK

DIELINE