




Installation Instructions

ComboSaver® Master Coded Notebook Lock

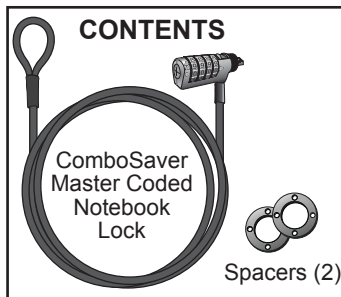

Important!
Kensington is not responsible for lost or forgotten combinations. Write down your combination in the space below, and register your combination at:
www.register.kensington.com

combination # _____


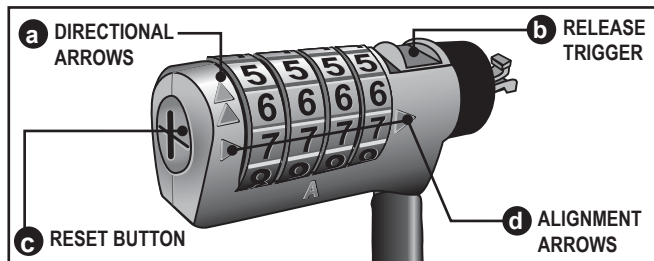 


fig. 1

Technical Support

1-800-535-4242 (US and Canada) • (650-572-2700)
www.kensington.com

U.S. Patents 5983679 and 6321579, additional Patents Pending



Kensington, the ACCO name and design, ComboSaver and the K Lock logo are registered trademarks of ACCO brands. All other registered and unregistered trademarks are the property of their respective owners.

© 2009 Kensington Computer Products Group, a division of ACCO Brands. Any unauthorized copying, duplicating, or other reproduction of the contents hereof is prohibited without written consent from Kensington Computer Products Group. All rights reserved. 3/09

901-2303-00
KL

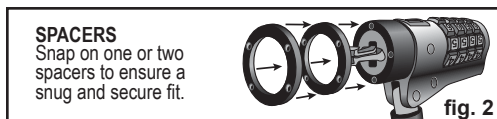 


fig. 2

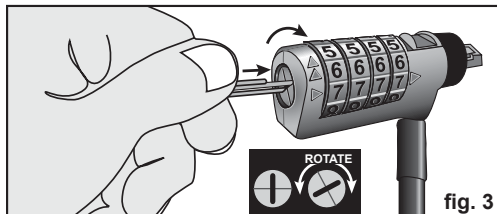


fig. 3

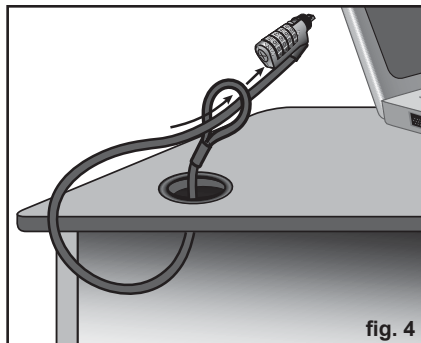


fig. 4

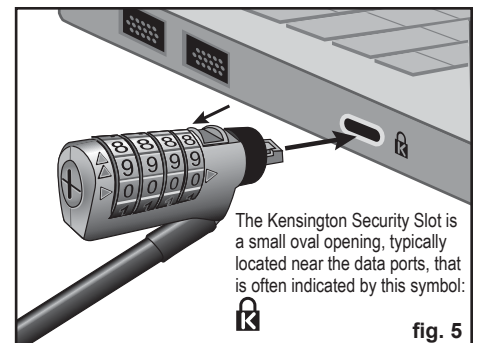


fig. 5

BEFORE YOU START: • Two triangle *Alignment Arrows*(d) are imprinted on the opposite sides of the lock dials for setting and reading a combination. [fig. 1]

• Snap on one or two spacers to ensure a snug and secure fit. [fig. 2]

• **WARNING:** Do not attempt to reset the combination while the lock is connected to a computer. Doing so may cause the lock to become jammed in the computer.

SETTING AND RESETTNG THE COMBINATION

1. **IF SETTING THE COMBINATION FOR THE FIRST TIME:** Line up the dials to display all sevens (7-7-7-7) along the row indicated by the *Alignment Arrows*(d)

IF RESETTNG THE COMBINATION: Line up the dials to display the current combination along the row indicated by the *Alignment Arrows*(d). [fig. 1]

2. Push in the *Reset Button*(c)[fig. 1] with the end of a paper clip or a flathead screwdriver and rotate until it stops (about ¼ turn) in either direction. [fig. 3] Release the paper clip or screwdriver.
3. While the reset button is rotated, turn the dials to the desired combination. Make sure the numbers of the new combination are aligned evenly between the two *Alignment Arrows* (d). [fig. 1]
4. Rotate the reset button back to its original position without applying pressure until the button pops back out.
5. **BEFORE INSTALLING LOCK:** Test your new combination prior to inserting it into equipment to confirm that your combination works. (see "UNLOCKING EQUIPMENT")
2. Write down your combination and store it in a safe place, or register it online at www.kensington.com.

LOST OR FORGOTTEN COMBINATIONS:

If you have lost or forgotten your combination, please contact your administrator.

Administrators: Reset the combination by following the instructions for your ComboGenie

Limited Lifetime Warranty

KENSINGTON COMPUTER PRODUCTS GROUP ("KENSINGTON") warrants only to the original purchaser of this product from a Kensington-authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service. Kensington reserves the right, before having any obligation under this limited warranty, to inspect the damaged Kensington product, and all costs of shipping the Kensington product to Kensington for inspection shall be borne solely by the purchaser. In order to recover under this limited warranty, Purchaser must make claim to Kensington within 60 days of occurrence, and must present acceptable proof of original ownership (such as original receipt, warranty card registration, on-line registration, or other documentation Kensington deems acceptable) for the product. KENSINGTON, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the original purchaser's date of purchase. You will need it for any warranty service. In order to keep this limited warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. This limited warranty does not cover any damage due to accident, misuse, abuse or negligence. This limited warranty is valid only if the product is used with the equipment specified on the product box. Please check product box for details or call KENSINGTON technical support. This limited warranty is non-transferable and does not apply to any purchaser who bought the product from a reseller or distributor not authorized by Kensington, including but not limited to purchases from internet auction sites. This warranty does not affect any other legal rights you may have by operation of law. Contact KENSINGTON at www.support.kensington.com or at one of the technical support numbers for warranty service procedures.

SECURING EQUIPMENT (AFTER COMBINATION HAS BEEN SET)

1. Lasso the security cable to a stationary object (such as a desk through-hole or a cable anchor) by passing the lock body through the looped end of the security cable [fig. 4]
2. Snap on at least one spacer according to fit. If lock is loose after step 4, add another spacer. If locking becomes difficult, remove one or both spacers. [fig. 2]
3. Line up the numbers of the combination along the *Alignment Arrows* (d) and slide back the *Release Trigger*(b). [fig. 1]
4. Insert the lock into the equipment's security slot, then let go of the *Release Trigger*(b) [fig. 1] to fasten the lock in the security slot. [fig. 5]
5. Scramble the dials to secure the lock

UNLOCKING EQUIPMENT

1. Line up the numbers of the combination along the *Alignment Arrows*(d). [fig. 1]
2. Pull back the *Release Trigger* (b) [fig. 1] and slide the lock out of the security slot.