



Installation Instructions

ComboSaver® Master Coded ComboGenie

This ComboGenie works in conjunction with an assigned Administrator Code. Please contact Kensington to obtain your Administrator Code.

Patents Pending

This product and its components may not be disposed of in standard waste. Please consult with your waste management provider or distributor regarding appropriate disposal of electronic products or return to Kensington directly for appropriate disposal.



Technical Support

1-800-535-4242 (US and Canada) • (650-572-2700)

www.kensington.com

Three-Year Limited Warranty

KENSINGTON COMPUTER PRODUCTS GROUP ("KENSINGTON") warrants only to the original purchaser of this product from a Kensington-authorized reseller or distributor that this product will be free from defects in material and workmanship under normal use and service for three years after date of purchase. Kensington reserves the right, before having any obligation under this limited warranty, to inspect the damaged Kensington product, and all costs of shipping the Kensington product to Kensington for inspection shall be borne solely by the purchaser. In order to recover under this limited warranty, Purchaser must make claim to Kensington within 60 days of occurrence, and must present acceptable proof of original ownership (such as original receipt, warranty card registration, on-line registration, or other documentation Kensington deems acceptable) for the product. KENSINGTON, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the original purchaser's date of purchase. You will need it for any warranty service. In order to keep this limited warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. This limited warranty does not cover any damage due to accident, misuse, abuse or negligence. This limited warranty is valid only if the product is used with the equipment specified on the product box. Please check product box for details or call KENSINGTON technical support. This limited warranty is non-transferable and does not apply to any purchaser who bought the product from a reseller or distributor not authorized by Kensington, including but not limited to purchases from internet auction sites. This warranty does not affect any other legal rights you may have by operation of law. Contact KENSINGTON at www.support.kensington.com or at one of the technical support numbers for warranty service procedures.



Kensington Computer Products Group
A Division of ACCO Brands
333 Twin Dolphin Drive
Sixth floor
Redwood Shores, CA 94065

901-2320-00
KL

Kensington, the ACCO name and design, ComboSaver and the K Lock logo are registered trademarks of ACCO brands. All other registered and unregistered trademarks are the property of their respective owners.
© 2009 Kensington Computer Products Group, a division of ACCO Brands. Any unauthorized copying, duplicating, or other reproduction of the contents hereof is prohibited without written consent from Kensington Computer Products Group. All rights reserved. 3/09

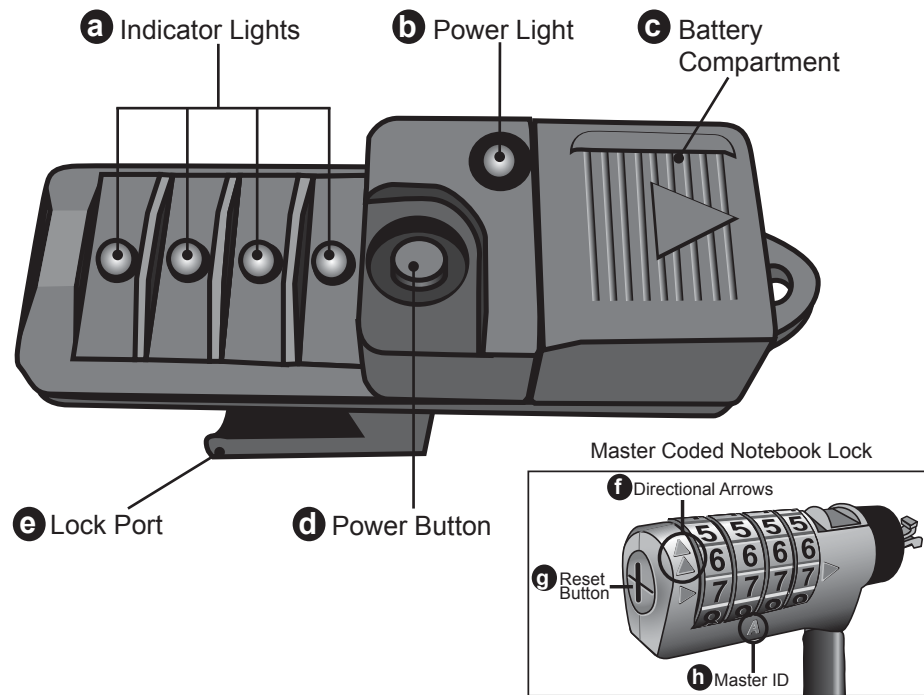 
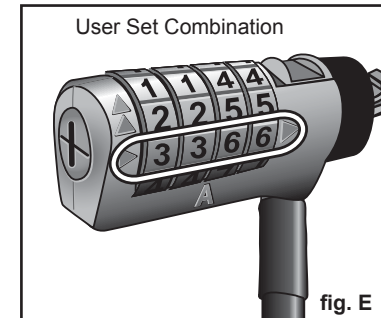 
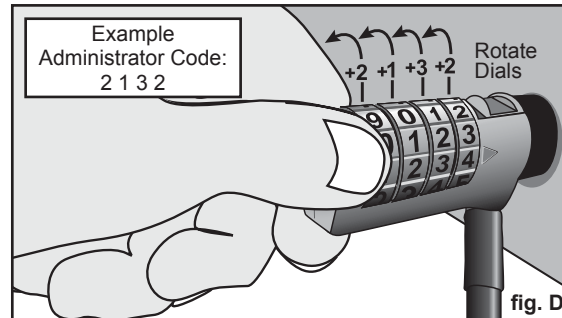 
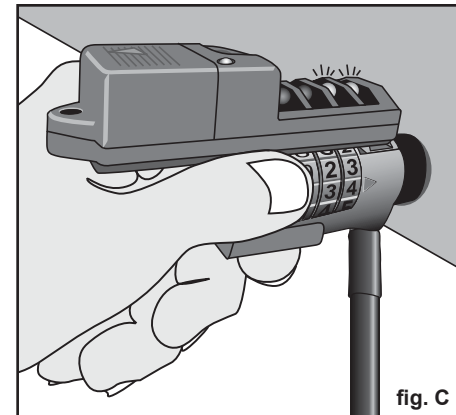 
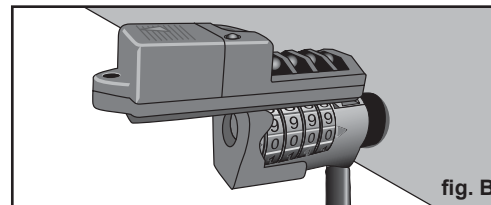 
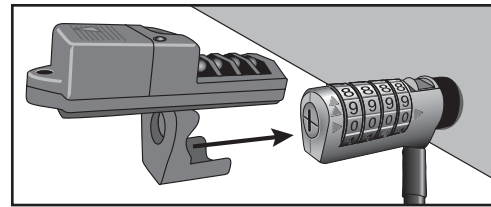 


fig. A

USING THE COMBOGENIE TO UNLOCK A MASTER CODED COMBO LOCK

Have available your provided four-digit **Administrator Code** as reference for the following steps. If you do not have your Administrator Code, please contact Kensington to obtain it.

1. Ensure that the **Reset Button** [(g) fig. A, reverse] is not pushed in.
2. Slide the ComboGenie over the ComboSaver® Master Coded Notebook Lock completely, and push until it fits snugly. [fig. B]
3. Push the black **Power Button** [(d) fig. A, reverse] to activate the ComboGenie. The **Power Light** [(b) fig. A] will turn on, indicating that the ComboGenie is active.
Note: The ComboGenie will automatically shut off after approximately one minute. If the Power Light turns off, push the Power Button again to reactivate the unit.
4. While the ComboGenie is attached and powered on, rotate one of the Combo Lock's dials, one number at a time, until the **Indicator Light** [(a) fig. A, reverse] for that dial is lit. Proceed to the next dial and repeat until all four Indicator Lights are lit. [fig. C]
5. Once all four Indicator Lights are lit, remove the ComboGenie.
6. Use **Administrator Code** to rotate each dial sequentially in the direction indicated by the **Directional Arrows** [fig. A, reverse side]: Starting from the leftmost dial, rotate the first dial according to the first digit in your Administrator Code, then rotate the second dial according to the second digit of the Administrator Code, and continue until all four dials have been rotated. [fig. D]
(In the example shown, the first digit of the Administrator Code is '2', therefore the first dial is advanced two clicks. The second digit of the Administrator code is '1', so the second dial is rotated one click, etc.)
7. The combination that now appears between the Alignment Arrows is the current **User Set Combination**. The lock may now be unlocked and/or reset according to the lock's instructions. [fig. E]

BATTERIES: To replace or install batteries: slide back the **Battery Compartment** [(c) fig. A, reverse] lid in the direction of the large arrow. Batteries should be inserted with the positive (+) side facing upward.

The **Power Light** [(b) fig. A, reverse] flashes to indicate low batteries. If the Power Light flashes, it is time to replace the two Lithium 3VOH (CR 1220) batteries.

PLEASE NOTE: If you lose your administrator code, please contact Kensington and have your lock's "**Master ID**" [(h) fig. A, reverse] ready to retrieve your code.