

SmartCut™

accessories

Swingline®

Cutting Mats

Use with SmartCut™
15" Trimmer:

- Pro

and GBC® Trimmer:

- A410pro

Each mat has four cutting surfaces. When a surface is worn, rotate mat to a new cutting surface. Replace mat when all four cutting surfaces are worn.

To Replace the Mat:

1. Slide finger into the groove under the mat.
2. Loosen the used mat and remove.
3. Rotate or replace with a new mat.

