

# SmartCut™

---

## accessories

*Swingline®*

## Cutting Mats

Use with SmartCut™ 12" Trimmers:

- Lite
- Pro
- Dial-A-Blade® Plus
- EasyBlade™
- EasyBlade™ Plus

and GBC® Trimmers:

- A300
- A400pro
- A425 Dial-A-Blade®

Each mat has four cutting surfaces.

When a surface is worn, rotate mat

to a new cutting surface.

Replace mat when all four cutting surfaces are worn.

To Replace the Mat:

1. Slide finger into the groove under the mat.
2. Loosen the used mat and remove.
3. Rotate or replace with a new mat.

