




Swingline®

Straight Blade

Use with SmartCut™ **Lite** or SmartCut™ **Pro** Trimmers
and GBC® A300/A400pro/A410pro Trimmers

To Replace the Blade:

1. Remove colored cap from the cutting handle.
2. Unscrew the silver knob and hold the magnetic plastic piece while detaching the connected blade.
3. Pick up the new blade with the plastic piece and screw on the silver knob, placing the colored cap back on the cutting handle.

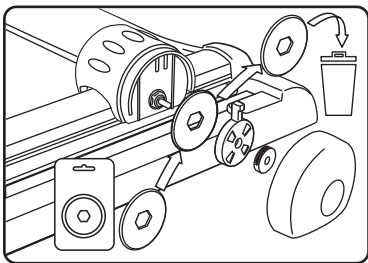

⚠ CAUTION: Blade is sharp!

swingline.com

TRM9212RBA650K
9212RBAe-11892-0507



ACCO Brands
300 Tower Parkway
Lincolnshire, IL 60069-3640
In USA call: 1 800 820 6220
©2007 ACCO Brands

Made to Swingline
Standards in China.



#9212RB