

K33930

Universal Notebook Docking Station with VGA/DVI

Mac OS X Instruction Guide

System Requirements

Supported Operating Systems

- Mac OS X

Recommended System Specifications

Kensington Docking Stations can be used on netbooks, laptops/laptops, and desktops running processors ranging from Intel Atom N270 to single, dual, and quad core CPUs.

Performance depends on the laptop's processing power. For best results, we recommend the following minimum system configuration:

- 1.2GHz Single Core CPU
- 512MB memory
- An available USB 2.0 port
- 30MB of free disk space
- DVI or VGA display up to 1920 X 1200
- Internet access for software updates

Setup and Software Installation

Note: We recommend that you save any work and close all running programs before starting the installation process.


1. Install the Software

Insert the Software Installation CD into your laptop's CD drive. Double-click the installer icon, and follow the onscreen instructions. If prompted, restart your laptop after software installation.




2. Power the Docking Station

Plug the power adapter into a working outlet and connect the other end to the Docking Station's power adapter jack on the back panel.

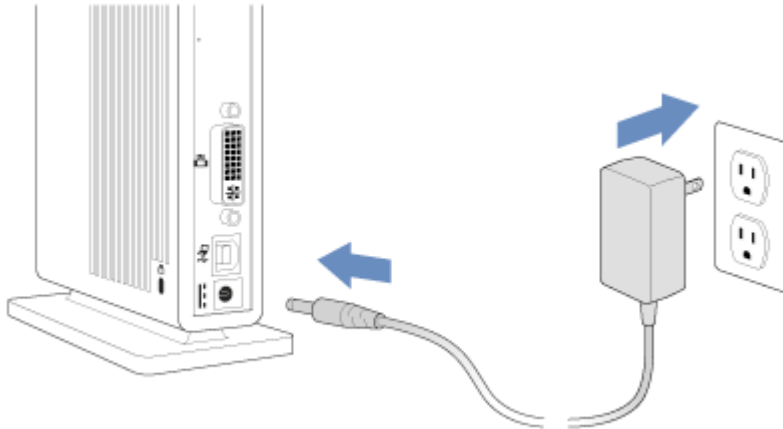


3. Connect the USB Cable to the Docking Station

Connect the "B" end of the USB cable provided to a matching port on the back panel of the Docking Station.

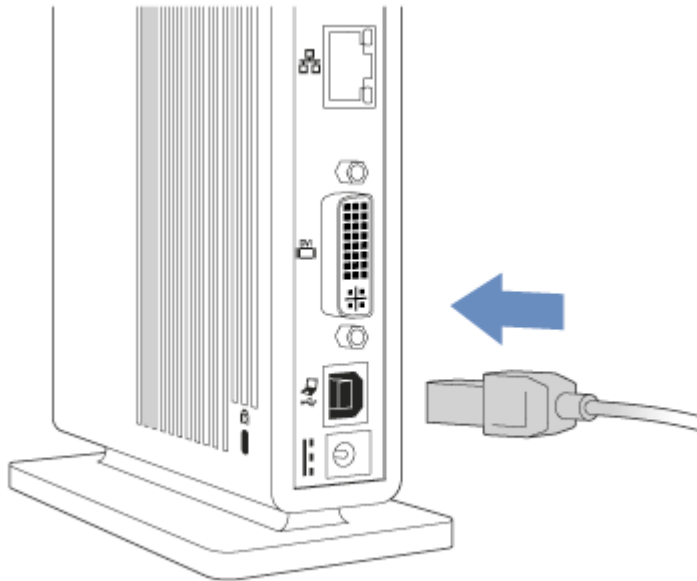

4. Connect Your Monitor to the Docking Station

Plug your monitor's DVI cable into the DVI/VGA connector on the back panel of the Docking Station. If you are connecting a VGA display, use the DVI-to-VGA adapter included in the package.

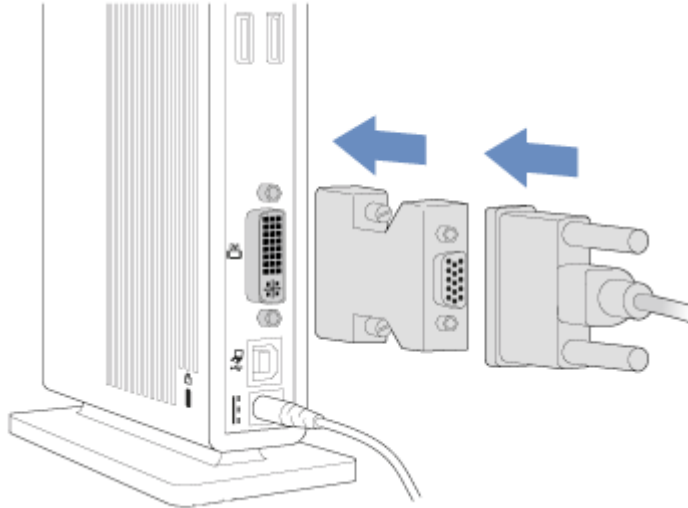

5. Connect the USB Cable to Your Notebook


Connect the "A" end of the USB cable to your laptop.

The attached monitor is set as your main display, and your laptop screen is set as your extended display. To set display configurations, see [Setting Video Modes](#).

6. Connect USB devices and audio devices

Connect USB peripherals (for example, keyboard, mouse, external hard drive, printer) to the USB ports provided.

Connect speakers to the rear stereo audio port and/or connect a headset to the front stereo audio and microphone ports.

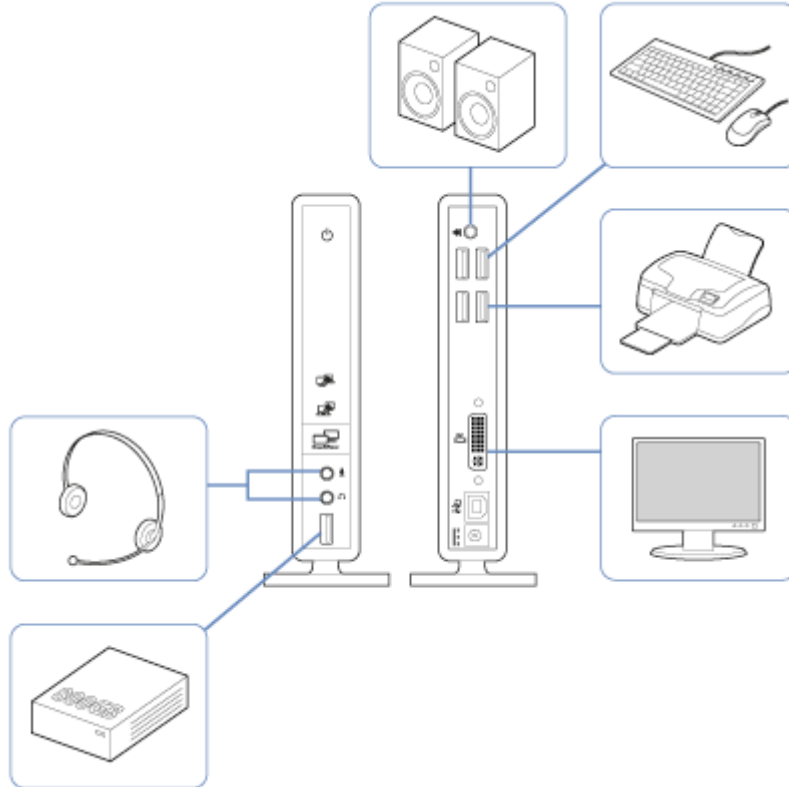

Using Your Docking Station

You may connect devices to their respective ports on the Docking Station while your laptop is running. A slight delay is normal before the laptop recognizes new devices.

If you experience problems using your Docking Station, please see [Troubleshooting](#) for help.

Connecting Devices to the USB 2.0 Ports

Connect any USB device (for example, keyboard, mouse, external hard drive, printer) to any of the Docking Station's five USB ports.

Note: If a USB device is connected to the Docking Station and does not work as expected, test the device by connecting it directly to one of your laptop's available USB ports.


Connecting Your Monitor to the Video Port

The Docking Station is equipped with one DVI-I port that is compatible with DVI, VGA, and HDMI monitors. To identify which type of monitor you have, look at the connector at the end of the cable attached to your monitor.




DVI Monitors

Plug a DVI cable (sold separately) into the DVI/VGA output of the Docking Station.

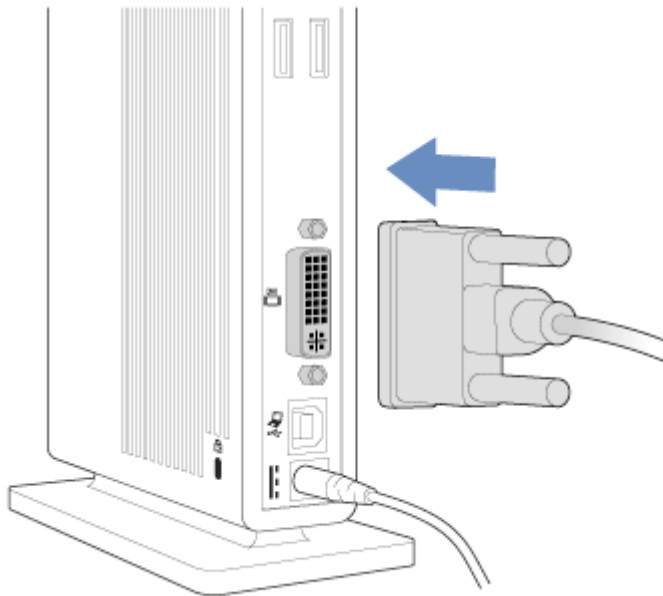


VGA Monitors

First plug the DVI-to-VGA adapter into the DVI output of the Docking Station, then plug the VGA cable into the adapter.

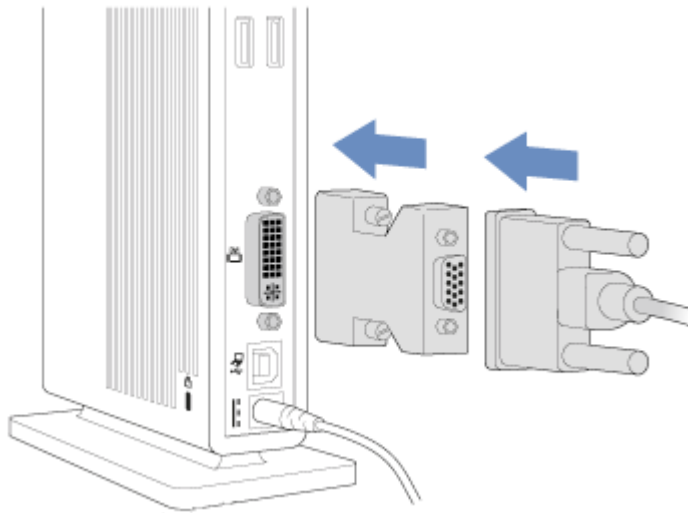

HDMI Monitors

First plug the DVI-to-HDMI adapter (included with some models) into the DVI output of the Docking Station, then plug the HDMI cable into the adapter.

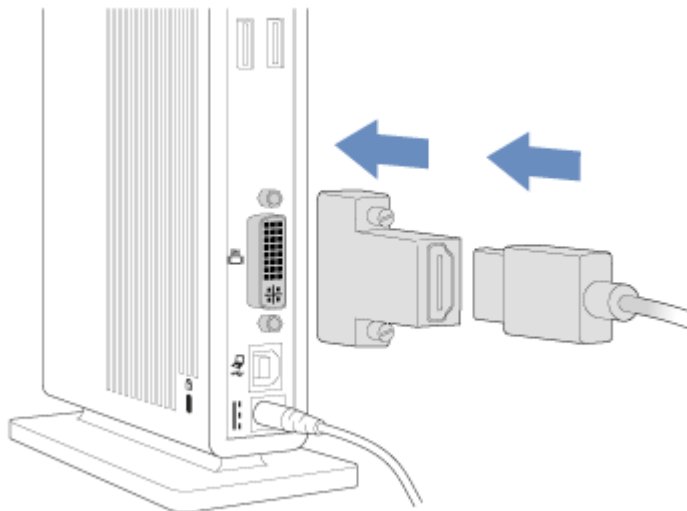

Note: If a DVI-to-HDMI adapter is not included with your Docking Station, you must purchase one separately to use the HDMI output. The HDMI output supports the video signal only. For the audio signal, you must use an adapter cable (sold separately) to connect the front or rear stereo audio output to external speakers or to the audio input on your monitor or TV.

You can connect or disconnect the monitor cable at any time without disconnecting the Docking Station from your laptop.

You can adjust video settings to customize your use of the Docking Station; see [Setting Video Modes](#) for information.

Note: We recommend that you auto-adjust the attached monitor once in a while to realign its

settings with the video output of the Docking Station. Refer to your monitor's user manual for instructions on how to do the auto-adjust procedure.

Audio Ports

The Docking Station is equipped with microphone input and two stereo audio ports. The front audio port is typically used for connecting a headset, while the rear audio port is typically used for external speakers. However, either port may be used for either purpose. The microphone port on the front is typically used for the microphone input on a headset or a standalone microphone.

Audio Device Detection

The Docking Station's front and rear stereo ports automatically detect when a device is plugged in. When you plug an audio device, such as PC speakers, into the port, your laptop automatically sends the sound output to that device.

If devices are connected to both stereo output ports (for example, speakers connected to the rear port and a headset connected to the front port) the sound goes only to the headset (front port). To reactivate the speakers (rear port), remove the headset plug from the front port.

Note: To use the microphone port, one of the stereo ports must have a device plugged in. In the case of a headset, both the stereo plug and the microphone plug must be connected. However as long as either the front or rear stereo port is connected, the microphone will be operational.

Disconnecting Your Docking Station from Your Notebook

To disconnect the Docking Station, simply unplug the USB cable from your laptop. You do not need to shut down your laptop before disconnecting.

Any windows that were open on the attached display automatically move to your laptop screen, and the attached monitor goes blank.

The Docking Station software automatically remembers your last configuration. So if, for instance, you were using the attached monitor as your main display, it returns to this state when you reconnect the Docking Station. However, windows that were previously open on the attached monitor do not return to it. See [Video Modes](#) for more information.

Warning: If you have an external hard drive or flash drive connected to the Docking Station, to prevent data loss, make sure the drive can be safely removed before disconnecting the Docking Station.

Video Modes

Kensington Docking Stations and Multi-Display Adapters increase the amount of visible workspace available to you by allowing you to extend your laptop's desktop onto multiple displays.

When extending your laptop's desktop to a second display, one of the displays must always

be the "main" or "primary" display. The application dock typically appears on the main display.

The video output of can easily be configured to meet your workspace needs. You may wish to adjust the settings based on the location of the monitor on your desk and on your personal preferences.

To set video modes, see [Setting Video Modes](#). The following modes are available:

Video Mode	Attached Monitor	Notebook	Screen Best for:
Extend	Extended Display	Main Display	Using the laptop screen as the main center of focus with the attached monitor providing additional workspace
Mirror	Main Display	Main Display	Showing the same information on both displays

In Extend mode, you can drag and drop windows from one screen to the other. This provides a number of advantages to increase productivity:

- Read email on one display; open attachments on the other.
- Expand a spreadsheet across both screens.
- For graphics editing, increase your working area by putting all the pallets and toolbars on the second display.
- Keep your desktop on the attached monitor and watch a DVD on your laptop screen.

The extended display can be set to the right or left of, above, or below the primary display (see [Setting Video Modes](#)).

Extend

The Extend option sets your laptop screen as the extended display, and the attached monitor as the primary display. You can change the primary display to your laptop screen (see [Changing the primary display](#)).

Mirror

With the Mirror option, both the laptop screen and the attached monitor show the same (primary) display.

Note: Notebook and monitor screens often have different aspect ratios. In this case, the software adjusts the scale of the display so that it most closely matches the display of the laptop screen. If the laptop screen is a widescreen (for example, 1280 X 800) format and the monitor is a standard (1280 X 1024) format, the display on the standard screen shows unusable black areas above and below the active area.

Setting Video Modes


To configure video settings, do the following:

1. Open the **System Preferences** menu.
2. Click **Displays**. This opens a Display Preferences window on both your laptop monitor and your attached monitor.

You can set the video settings for each monitor individually by using the Display Preferences window shown on each monitor.

NOTE: To view both Display Preferences windows on your main monitor, click **Gather Windows**.

NOTE: You can also add an icon to the Menu Bar that opens Display Preferences. In the Display Preferences window, click **Show displays in menu bar**. You can then click this icon to configure any of the settings described below.

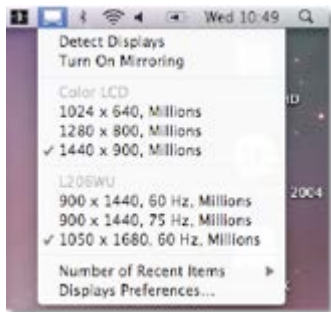


Screen Resolution

Screen resolution refers to the number of pixels displayed onscreen horizontally and vertically. A higher resolution means that you can see more of your image on the screen without scrolling or panning.

The appropriate resolution to select depends on the resolutions supported by your monitor. Check your monitor's user guide to determine what resolutions are supported. If your monitor supports a resolution that is higher than the maximum resolution supported by the Adapter, the highest supported resolution is used. See [Supported Video Settings](#) for a list of resolutions supported by the Adapter.

In most cases, the Adapter software automatically selects the most appropriate setting for your monitor, so you do not need to change the setting. However, if you are using an older monitor or if you would like to use a resolution other than the default, click the **Display** tab, and then click one of the options provided under **Resolutions**.

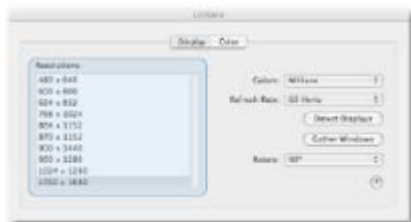


Color Quality

Color quality defines the number of different colors that can be shown on the screen at the same time. The greater the color quality, the better the picture quality. To select the color quality, open the **Colors** list and select the option you want.

Screen Rotation

The picture on your screen may be rotated as required. For instance, if your attached monitor is physically rotated to the left (counterclockwise) for viewing in portrait mode, click **Rotate** and select the correct option to adjust the picture on the display.

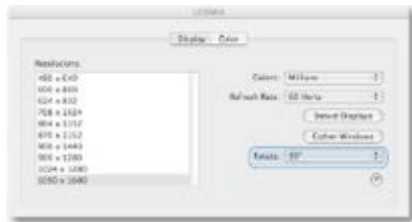

Video Mode Options

To set the video mode you want, in the Display Preferences windows, click the **Arrangement** tab and do one of the following:

- **Extend:** Leave the **Mirror Displays** box unchecked. To change the position of the displays, click and hold on a display icon and drag it to the left or right.



- **Mirror:** Check the **Mirror Displays** box.



See [Video Modes](#) for a description of each mode.

Changing the primary display

In Extend mode, the primary display shows the menu bar. To change the primary display from one monitor to the other, on the **Arrangement** pane, drag the menu bar icon from one display icon to the other.



Supported Video Settings

	Supported Refresh Rate	
	16 bit color depth	32 bit color depth
640 x 480	60, 72, 75	60, 72, 75
800 x 600	56, 60, 72, 75, 85	56, 60, 72, 75, 85
1024 x 768	60, 70, 75, 85	60, 70, 75, 85
1280 x 768	60, 75, 85	60, 75, 85
1280 x 800	60, 75, 85	60, 75, 85
1280 x 960	60, 85	60, 85
1280 x 1024	60, 75, 85	60, 75
1366 X 768	60	60
1440 x 900	60	60
1400 x 1050	60, 75, 85	60, 75, 85
1600 x 1200	60	60
1680 x 1050	60	60
1920 x 1080	60	60
1920 x 1200	60	60
2048 x 1152	60	60

- Resolution refers to the number of pixels displayed onscreen horizontally and vertically. A higher resolution means that you can see more of your image on the screen without scrolling or panning.
- Color depth defines the number of different colors that can be shown on the screen at the same time. The greater the color depth, the better the picture quality.
- Refresh rate (also called vertical frequency) measures the speed that the entire screen is rescanned. Higher frequencies reduce flicker, because they light the pixels more frequently, reducing the dimming that causes flicker.


Uninstalling the Software

1. Insert the Software Installation CD into your laptop's CD drive. Double-click the uninstaller icon.
2. Follow the onscreen instructions to uninstall the software.
3. If prompted, restart your laptop.

Note: We recommend that you restart your laptop after uninstalling the software.

Securing Your Docking Station

You can use the Kensington security slot to connect a Kensington Lock (sold separately) to secure your Docking Station by locking it to your desk.

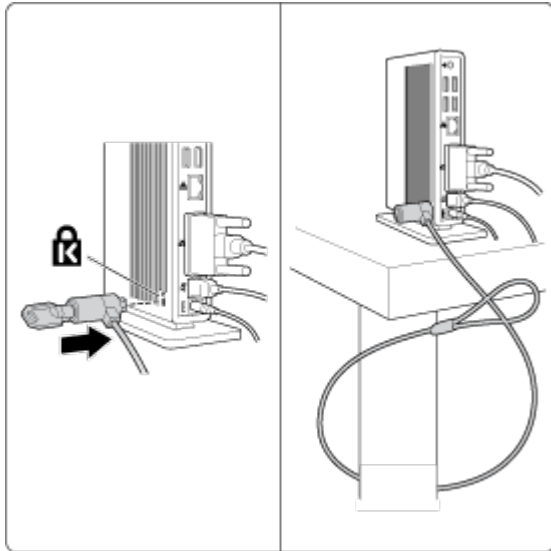

See the user manual of the K-Lock device for further instructions on how to use the device.

Troubleshooting

If your Docking Station does not operate as expected, first check these items to try and correct the problem. If the problem persists, please contact Kensington Technical Support. See [Technical Support](#).

How Standby or Hibernate Mode Affects Devices Attached to the Docking Station

Attached Monitors

When the Docking Station is connected to a laptop and an attached monitor, if the laptop goes into Standby or Hibernate Mode, the attached monitor display goes blank.

Note: Depending on your laptop settings, the laptop might go into Standby or Hibernate Mode when you close the lid.

When the laptop returns to an active state, the attached monitor display keeps the same

settings it had before the laptop went into Standby or Hibernate Mode. However, if the attached monitor was set to show the extended display, windows that were previously on the attached monitor do not move back to that secondary monitor. Also, if the attached monitor is showing the extended display and the laptop requires a login after Standby or Hibernate Mode, the login screen appears on both primary laptop screen and on the attached monitor.

Other Devices

If another device is connected to a port on the Docking Station and the laptop goes into Standby or Hibernate Mode, that device will not function. For example, if you are using a USB 2.0 port to connect an external USB device, the device will not be available until the laptop returns to an active state.

General

NOTE: The indicator lights are not supported if you use the Docking Station with a Mac computer.

The Docking Station power/connection indicator is not "on" (amber or green).

Check to be sure that the power adapter is plugged into the Docking Station and into a working electrical outlet. Do not use any adapters other than the one supplied with the Docking Station.

My laptop will not "connect" to the Docking Station, and the light of the power/connection indicator light is amber.

Unplug the USB 2.0 cable from your laptop, wait at least five seconds, and then reinsert the USB 2.0 cable.

If the problem persists, try connecting the USB 2.0 cable to a different USB 2.0 port on your laptop.

The indicator lights and are both turned "on," but the Docking Station is not working properly.

This indicates a malfunction of the Docking Station. Disconnect the Docking Station from your laptop. Remove the power adapter from the Docking Station. Reconnect the power adapter to the Docking Station and the USB cable to the laptop. If the problem persists, uninstall and reinstall the Docking Station software.

Video Output

The display on my monitor is blank.

- Make sure that the laptop connected to the Docking Station is running properly and is not in Standby or Hibernate Mode. When the laptop is in Standby and Hibernate Mode, the monitor display is always blank.
- Make sure that the USB 2.0 cable is inserted correctly in your laptop, the cable is connected to the Docking Station, and the power adapter is connected to the Docking Station and to a working power outlet. Make sure that the video cable is

securely connected to the video output and is secured with the fixing screws on both sides.

- Make sure that the software has been installed following the installation steps. On a Windows computer, the Kensington icon for your Docking Station should be visible in the system tray.
- Make sure that you did not disable the video output by accidentally pressing and holding the Dualview button for more than three seconds or by selecting Off in the taskbar menu. To check, press the Dualview button and see if the display reappears. NOTE: The Dualview button is not supported if you use the Docking Station with a Mac computer.
- If the problem persists, disconnect the Docking Station from your laptop. Remove the power adapter from the Docking Station. Reconnect the power adapter to the Docking Station and the USB cable to the laptop.

When I am in Extended mode and I am playing back video clips, only one video clip can be seen.

When in Extended mode, only one video playback application can be used at a time. If multiple video clips are being played, only one video clip is visible to the user—the others are blacked out. This is true for web pages with embedded video clips also: You can only view one such web page at a time. To view multiple web pages with embedded video clips, view one page in the laptop screen and the other on the attached monitor.

With Windows Vista I cannot play back video clips on my attached monitor.

On Windows Vista systems, some video clips cannot be played on the attached monitor when it is set as the extended display. To play these video clips, move the video application to your laptop screen. Kensington regularly updates video playback support in extended mode; check the Kensington website for software updates.

When I close the lid of my laptop, the display on the attached monitor goes blank.

By default, most the laptops go into Standby or Hibernate Mode when the lid is closed. This turns off the display on an attached monitor. To change the Standby/Hibernate setting on a Windows computer, do the following:

1. Open the Control Panel and click **Power Options**.
2. Do the following for your operating system:
 - For Windows Vista, click **Choose what closing the lid does** in the left-hand column. Select the **When I close the lid** pull-down menu, and then click **Do nothing**.
 - For Windows XP, select the **Advanced** tab. In the **Power buttons** section, under the option **When I close the lid of my portable laptop**, click **Do nothing**.

The display on my attached monitor is blurred.

We recommend that you auto-adjust the attached monitor once in a while to realign its settings with the video output of the Docking Station. This action should fix most of the issues related to the quality of the video on the monitor. Refer to your monitor's user manual for instructions on how to do the auto-adjust procedure.

The attached monitor is flickering.

Flickering is usually associated with CRT monitors caused by a low refresh rate. Always try and use the maximum refresh rate available:

- In Extend mode, increase the refresh rate of the attached monitor.
- In Mirror mode, increase the refresh rate of your laptop screen, which will in turn increase the refresh rate of the attached monitor.

For supported refresh rates, see [Supported Video Settings](#).

Audio

I cannot hear anything through my laptop speakers.

Some laptops default to the USB audio when the Docking Station is connected, disabling your laptop's built-in speakers. To enable the speakers on a Windows computer:

1. Open the Control Panel and click **Sounds and Audio Devices**.
2. Do the following for your operating system:
 - For Windows Vista: Select the **Playback** tab, and then select a device that is not USB Audio.
 - For Windows XP: Select the **Audio** tab, and then, under **Sound Playback**, select a device that is not USB Audio.

Note: You must close the application currently using the audio device and restart it to enable this change.

My microphone does not work.

You can use a microphone with your Docking Station only if another audio device is connected to either the front or the back stereo audio output port. Connect an audio device to one of those ports, and try using the microphone again.

Technical Support

Technical support is available to all registered users of Kensington products.

Web Support

You may find the answer to your problem in the Frequently Asked Questions (FAQ) section of the Support area on the Kensington website: www.kensington.com.

Telephone Support

There is no charge for technical support except long-distance charges where applicable. Please visit www.kensington.com for telephone support hours. In Europe, technical support is available by telephone Monday to Friday 09:00 to 21:00 (Central European time).

Supported Operating Systems

- Call from a phone where you have access to your product
- Be prepared to provide the following information:
 - Name, address, and telephone number
 - Name of the Kensington product

- Make and model of your computer
- System software and version
- Symptoms of the problem and what led to them

Please call one of these numbers:

België/Belgique 02 275 0684

Canada 1 800 268 3447

Denmark 35 25 87 62

Deutschland 0211 6579 1159

España 91 662 38 33

Finland 09 2290 6004

France 01 70 20 00 41

Hungary 20 9430 612

Ireland 01 601 1163

Italia 02 4827 1154

México 55 15 00 57 00

Nederland 053 482 9868

Norway 22 70 82 01

Österreich 01 790 855 701

Portugal 800 831 438

Schweiz/Suisse 01 730 3830

Sweden 08 5792 9009

United Kingdom 0207 949 0119

United States 1 800 535 4242

International Toll +31 53 484 9135